# 8MP H.265 IP IR Bullet Camera with 2.8–12mm Auto Focus Lens

PWIP8BVAF



Please read these instructions carefully before operating the unit and keep for further reference.



Please read this instruction carefully before operating the product and keep it for further reference. All examples and pictures used here are for reference only. The contents of this manual are subject to change without notice.

#### CAUTION:

- If the product does not work properly, please contact your dealer or the nearest service centre. Never attempt to disassemble the camera yourself. We shall not be responsible for any problems caused by unauthorised repair or maintenance.
- Do not allow water or liquid into the camera while in use.
- When using the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- When the product is mounted on wall or ceiling, the device needs to be firmly fixed.
- Make sure the power supply voltage is correct before using the camera.
- Do not drop the camera or subject it to any physical shock.
- If cleaning, please use a clean soft cloth with a little neutral detergent to wipe it gently.
- Do not aim the camera at the sun or in any area where there is bright lighting.
- The device may be burned out by a laser beam, so when any laser equipment is in use, make sure that the surface of the device will not be exposed to the laser beam.
- Do not place the camera in extremely hot, cold , dusty or damp locations, and do not expose it to high electromagnetic radiation.
- To avoid heat accumulation, good ventilation is required for operating environment.



1.0 Introduction	4
1.1 Product Features	4
1.2 Product Dimensions	4
1.3 Contents	4
1.4 Specification	5
2.0 Overview	6
3.0 Installation	7
4.0 Network Connection	8




The Genie PWIP8BVAF is a 8MP IP IR bullet camera with a 2.8–12mm varifocal auto focus lens. The camera also features up to 50m IR night view distance as well as being IP67.

#### **1.1 Product Features**

- NDAA compliant •
- 8MP (3840 × 2160) H.265 coding •
- Maximum resolution: 3840 × 2160
- ICR auto switch, true day / night, ROI coding •
- 3D DNR, digital WDR, HLC, BLC, defog
- 30~50m IR night view distance ٠
- DC12V / PoE power supply •
- IP67 ingress protection •
- Supports three streams
- Supports remote monitoring by smart phones and tablet PCs with iOS and Android OS ٠
- Intelligent analytics •

### **1.2 Product Dimensions**

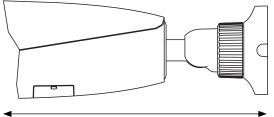

217.7mm

80.5mm

**1.3 Contents** 



Camera

Quick Start Guide



4 Tapping Screws PA 4×25 1 Machine Screw PWM3×5








## 1.4 Specification


	Image Sensor	1/2.7 "CMOS					
	Image Size	3840 × 2160					
	Electronic Shutter	1 / 25 s ~ 1 / 100000 s					
	Iris Type	Fixed Iris					
	Minimum Illumination	0.11 Lux @ F2.2, AGC ON, 0 Lux with IR 0.032 Lux @ F1.2, AGC ON, 0 Lux with IR					
Camera	Lens	2.8~12mm @ F1.4, (Motorised zoom lens), Horizontal field of view: 102.7°~32.2°					
Camera	Lens Mount	M12 or Φ14 optional					
	Wide Dynamic Range	Digital WDR					
	BLC	Yes					
	HLC	Yes					
	Defog	Yes					
	Digital NR	3D DNR					
	Angle Adjustment	Pan: 0°~360°, Tilt: 0°~90°, Rotation: 0°~360°					
	Video Compression	H.265, H.264					
	H.264 Compression Standard	Baseline Profile, Main Profile, High Profile					
	Resolution	8MP ( 3840 × 2160), 6MP (3072 × 2048), 5MP (2592 × 1944), 720p (1280 × 720), D1, CIF, 480 × 240					
	Main Stream	8MP, 6MP, 5MP (1~20fps)					
	Sub Stream	720p, D1, CIF (1~20fps)					
Image	Third Stream	D1, CIF, 480 × 240 (1~20fps)					
	Bit Rate	64 Kbps ~ 8 Mbps					
	Bit Rate Type	VBR / CBR					
	Audio Compression	G711A / U					
	Image Settings	ROI, Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, etc. Adjustable through client software or web browser					
	ROI	Each ROI to be configured separately					
	Remote Monitoring	Web browsing, CMS remote control					
	Online Connection	Supports simultaneous monitoring for up to 3 users. Supports multi- stream real time transmission					
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP, 802.1x, UPnP, HTTP, HTTPs, QoS					
	Interface Protocol	Onvif compatible					
Functions	Intelligent Analytics	Region intrusion detection, Scene change detection, Line crossing detection					
	Storage	Network remote storage, Micro SD card storage					
	Smart Alarm	Motion detection, SD card error, SD card full					
	General Function	Watermark, IP address filtering, video mask, heartbeat, illegal login lock					
	PoE	Yes					
	IR Distance	30 ~ 50 m					
Interface	Network	RJ45					
	Video Output	No					
	Audio	1CH audio input					
Interface	, to allo	Built-in Micro SD card slot up to 128GB					
Interface	Storage	Built-in Micro SD card slot up to 128GB					
Interface		Built-in Micro SD card slot up to 128GB Yes					
Interface	Storage						
Interface	Storage Hardware Reset	Yes					
	Storage Hardware Reset Ingress Protection	Yes IP67					
Interface Others	Storage Hardware Reset Ingress Protection Power Supply	Yes IP67 DC12V / PoE < 9.5W					
	Storage Hardware Reset Ingress Protection Power Supply Power Consumption	Yes IP67 DC12V / PoE					



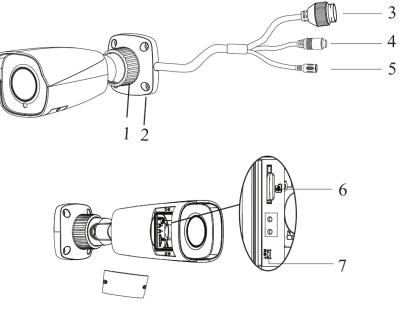


- 1. Fixed Ring
- 2. Mounting Base
- 3. Network Connector (It is recommended to install the security cap for outdoor installation)
- 4. Audio Input

- Power Connector (If the PoE switch is used to power the camera, DC12V power supply is not required).
- 6. Micro SD Card Slot
- 7. Reset

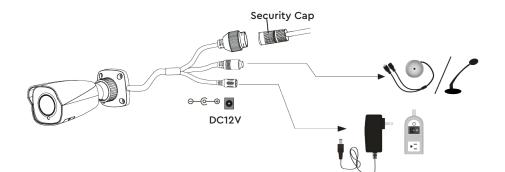

### **Connecting Network Cable**

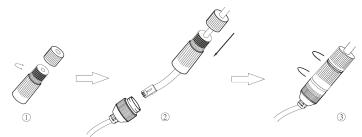


- 1. Loosen the nut from the main element.
- 2. Run the network cable (without RJ 45 connector) through both elements. Then crimp the cable with RJ 45 connector.
- 3. Connect the cable to the hermetic connector. Then tighten the nut and the main cover.




Please make sure that the wall or ceiling is strong enough to withstand 3 times the weight of the camera. Please install the camera in and under a dry environment.


1. Drill the screw holes and the cable hole on the wall according to the drill template.

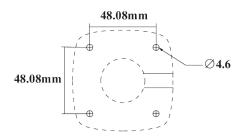


- 2. Route and connect the cables.
- 3. Secure the mounting base with camera to the wall with the screws provided.

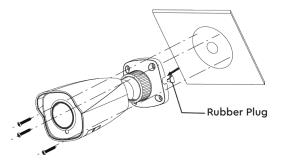

4. Bracket adjustment. Before adjustment, preview the image of the camera on a monitor and then loosen the fixed ring to adjust the view angle of the camera.

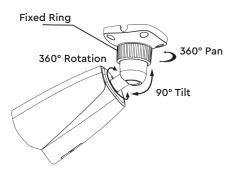

5. Open the cover of the camera and then insert a micro SD card. After that, adjust Zoom or Focus to obtain an optimum image (If the camera is fixed or motorised lens, please skip this step). Before adjustment, preview the image of the camera on a monitor.

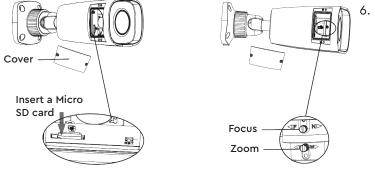

. Install the cover back to the camera and fix it firmly with the screws. (Note that the cover should not be installed unevenly).


#### Access the Camera through the IP Tool



- 1. Make sure that the camera and the PC are well connected via LAN.
- 2. Find the IP-Tool from the CD and then install it in the computer. After that, run the IP Tool as shown below.

Device Network Search										
Immediate Refresh 🖌 🚺 About										
Device Name	Device Type	Product Model	IP Address	Http Port	Data Port	Subnet	Modify Networ	k Parameter		
name	IPC	unknown	192.168.226.201	80	9008	255.255	MacAddress			
name	IPC	unknown	192.168.1.2	80	9008	255.255	IP Address	192.168.226	5.201	
name	IPC	unknown	192.168.1.3	80	9008	255.255	Subnet Mask	255.255.25	5.0	
							Gateway	192.168.226	ð. 1	
							Modify Tip: Enter the administrator password, and then modify the network parameters. Restore IPC Default Configuration			
5						×				
Total Device	: 3	Local IP A	ddress:192.168.1.	4   Subnet Ma	ask:255.255.2	55.0   Ga	teway: 192.168.	1.1   DNS : 210.	21.196.6	

3. Modify the IP address. The default IP address of this camera is 192.168.226.201. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as that of the computer. Please modify the IP address of your device according to the practical situation.

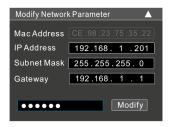

For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X and the gateway shall be changed to 192.168.1.1. After modification, please enter the password of the administrator and click "Modify" button to modify the settings. The default password of the administrator is "123456".

4. Double-click the camera listed in the IP-Tool or manually enter the IP address in the address bar of the web browser to connect IP-CAM. Then follow directions to download and install the plugin. Enter the username and password in the login interface. The default username is admin; the default password is 123456.



Sales +44(0)1707 330541 Enquiries sales@genieproducts.co.uk Website www.genieproducts.co.uk

