

IP65 125KHz Proximity Reader

EM-PROX-MUL



User Manual

Please read these instructions carefully before operating the unit and keep for further reference.

Contents


| | |
|------------------------------|---|
| 1.1 Product Features..... | 3 |
| 1.2 Product Dimensions | 3 |
| 1.3 Specification..... | 4 |
| 1.4 Mounting | 4 |
| 1.5 Recommendation..... | 5 |
| 1.6 Wiring | 5 |
| 1.7 Power Sequences..... | 5 |
| 1.8 Troubleshooting..... | 6 |

The Genie EM-PROX-MUL is an IP65 mullion style access control reader designed to work with the 125KHz frequency cards or fob technology. The reader emits a halo effect blue light when powered, turning green / red when a card / fob is presented. The reader also has tamper and reverse power polarity protection built in. Output technology is wiegand 26 bit meaning it will be compatible with many access control systems within the market and makes it a great choice for any installer looking for an aesthetically pleasing generic access control 125KHz reader.

1.1 Product Features

- Reader supports 125KHz cards or fobs
- Static charge protection on input and output signals
- IP65 ingress protection
- RGB halo LED surround illumination
- Reverse polarity
- Tamper protection

1.2 Product Dimensions

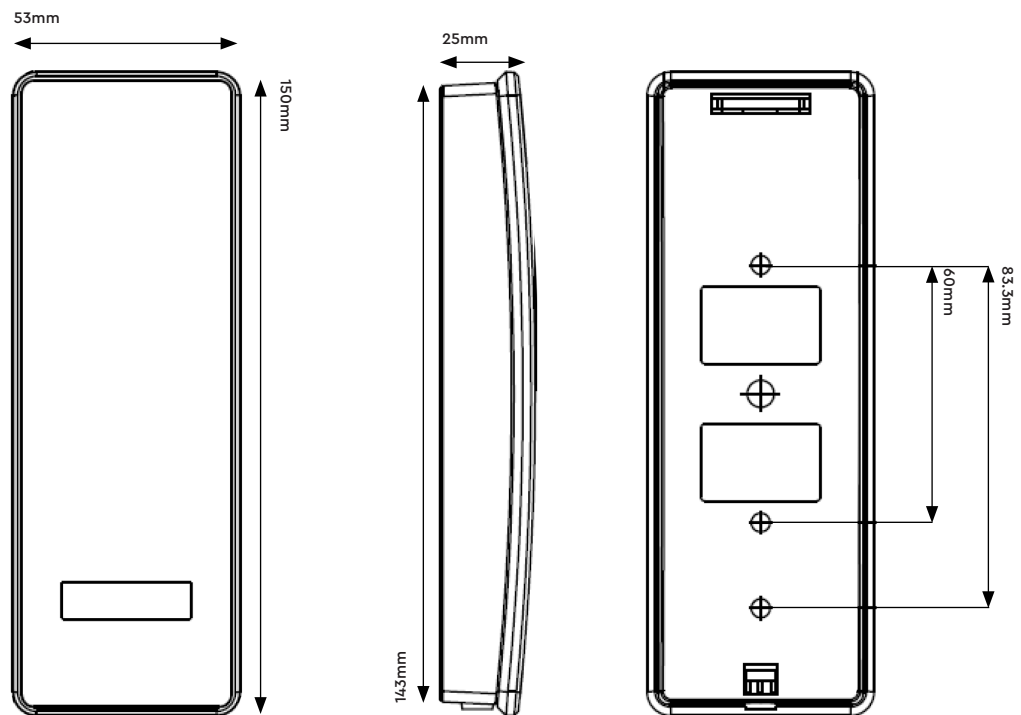


1.3 Specification

| | |
|------------------------|--|
| Reader Output Format | CSN/UID 26 bit (32 bit optional) |
| Reader Connection Type | 40cm Fly Lead |
| Buzzer Control | Reader and controller control |
| LED / Back Lit Control | Defines different LED colour response based on LED input |
| Typical Read Range | >5cm (Based on different technology) |
| Frequency | 125KHz |
| Reader Standard Output | Wiegand 26 bit (Default), 32 bit (Optional) |
| Wiring Distance | 100m (22AWG with shielded cable) |
| Operating Voltage | DC9-15V |
| Operating Current | 120mA (Max.) |
| Operating Temperature | -30°C - 70°C |
| Operating Humidity | 10% - 90% |
| Case Material | PC & ABS, Black |
| Dimensions | 150 × 53 × 25 mm |
| Weight | 180g |


1.4 Mounting

1. Install the back plate on the wall as shown in the diagram below (1).
2. The cover shall clip on the upper edge (2) then push in the bottom part as show in diagram (3).
3. Tighten the non-dropout screw, which located underneath of the reader to fix the reader and the back plate (4), installation is completed.

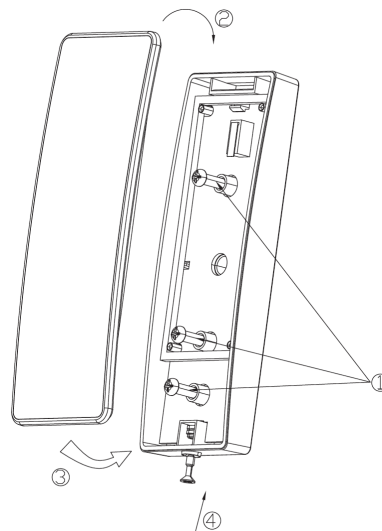

1.5 Recommendation

1. Linear DC Power Supply.
2. 22AWG shielded cable, it's required to do "one-point" ground. (As shown in the diagram)

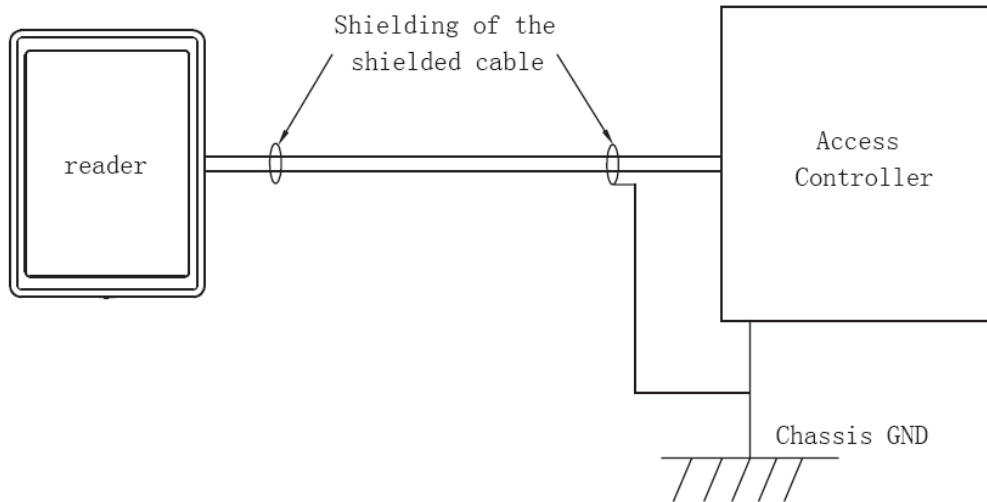

1.6 Wiring

| Colour | Label | Description |
|--------|-----------|---|
| Red | +12V dc | Power Supply to the reader |
| Black | GND | Signal GND |
| Green | Data0 | Wiegand Output data, D0 |
| White | Data1 | Wiegand Output data, D1 |
| Yellow | RED LED | RED LED control, active low. |
| Blue | Green LED | Green LED control, active low |
| Brown | Buzzer | Buzzer input, active low |
| Orange | Tamper | Tamper output (open collector, Active low, max 100mA) |
| Purple | Doorbell | Door bell output (open collector, +5Vdc output ≤ 5mA) |

1.7 Power Sequences

1. When reader is powered up, the Green back will flicker for 5 seconds. The reader will beep once and the reader is in Ready mode.
2. Present the card. The Blue LED will flicker once, buzzer will beep once.
3. When card is present and read by the reader, the card data will be transmitted to the controller. Whether the back lit of the reader will remain ON or Flash or change to Green or Red color, this depends on the Green and Red LED inputs.
4. For number pad reader, when a number is pressed and successfully detected, the back lit under the number will flash 1 time and the buzzer will beep once. The number being pressed will burst out by default (4 bits burst).

1.8 Troubleshooting

No response when power up

Discount the power and confirm that the power supply cable is correctly connected (See "Wiring" above).

Check the input voltage is sufficient (See "Specifications" above).

Auto Restart

Check the input voltage is sufficient (See "Specifications" above).

Cannot read card number correctly

Check the format setting on the controller if it is the same as the card format. Use approved card (known format and Facility Code) to test.

Check if the shield cable is correctly connected to Classis Ground at ONE point only.

Reader beeps but No card data info

Check if data 0 & data 1 cable is correctly connected (See "Wiring" above).

Check the input voltage at the card reader end is correct (See "Specifications" above).

Buzzer error

Check if the buzzer cable is correctly connected (See "Wiring" above).

Back lit error

Check the Led cable is correctly connected (See "Wiring" above).

Use Default Configuration Card to set it back to normal.

Keypad no response

Power off reader for 5 seconds and power on again

Sales +44(0)1707 330541

Enquiries sales@genieproducts.co.uk

Website www.genieproducts.co.uk

genie